



Originalfernbedienung Ersatzfernbedienung

	Title Del		Shift + 1
	Level Meter		Shift + 2
	Motion Sensor		Shift + 3
	Power Audio		Power
	Display Chara		Shift + 4
	Eco Dimmer		Shift + Mute / Dimmer
	Tv/Video		TV/Radio /
	Power Tv		Shift + Power
	1		1
	2		2
	3		3
	MIC Vol+		Shift + Up
	TV Channel+		Shift + CH+ /
	4		4
	5		5
	6		6
	MIC Vol-		Shift + Down







 





 







Originalfernbedienung Ersatzfernbedienung

	TV Channel-		Shift + CH- /
	7		7
	8		8
	9		9
	Karaoke Setting		Smart / List
	10		Guide / EPG / -/-
	Sleep		Sleep / Timer
	0		0
	A.STBY		Shift + 0
	+10		Fav / Marker / PC
	Clock/Timer		Shift + Sleep / Timer
	Mic Mix		Shift + Smart / List
	Karaoke Scoring		Shift + AV / Input / RDS
	Reserve		Shift + Green / APP /
	Vocal Masking		Shift + Red / Netflix /
	Vocal Support		Shift + Subtitle / EQ
	Top Menu/PG		D.Menu / Top








 




 




 
 
 


 





Originalfernbedienung Ersatzfernbedienung

	Menu/PL		Menu / Home
	Cancel		Exit / Cancel / Clear
	Audio Vol+		Vol+
	Tv Vol+		Shift + Right
	Up		Up
	Left		Left
	Enter/Set		OK
	Right		Right
	Down		Down
	Audio Vol-		Vol-
	Tv Vol-		Shift + Left
	On Screen		Display / Media
	Set Up		Setup / OPT /
	Fade Muting		Mute / Dimmer
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Back/Tuner/Play Mode		Back / Return
	Return		Shift + Back / Return
	I<<		I<< / Preset-
	I<< Group Title Skip		Shift + I<< / Preset-
	>>I		>>I / Preset+
	Group Title Skip >>I		Shift + >>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Group Title >>		Shift + >> /
	Play/Pause		Red / Netflix / Search
	Play/Pause USB		Shift + Play /
	FM Tuner		Shift + 6
	Tuner AM		Blue / Prime Video / Random
	Audio/MPX		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Zoom		Zoom / Size
	Angle		Info / Angle



