



Originalfernbedienung Ersatzfernbedienung

	Power Audio		Power
	Power Tv		Shift + Power
	1		1
	2		2
	3		3
	5		5
	4		4
	6		6
	7		7
	8		8
	9		9
	0		0
	10		Guide / EPG / -/-
	+10		Fav / Marker / PC
	Audio Vol+		Vol+
	Audio Vol-		Vol-
	Fade Muting		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	Menu/PL		Menu / Home
	Top Menu/PG		D.Menu / Top
	On Screen		Display / Media
	Play		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Back/Tuner/Play Mode		Back / Return
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Play/Pause		Red / Netflix / Search
	Play/Pause USB		Shift + Play /
	Play/Pause		Shift + Yellow / YouTube /
	Play/Pause Bluetooth		Blue / Prime Video / Random
	Audio/MPX		Audio / Lang I/II
	Subtitle		Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

	Zoom		Zoom / Size
	Audio In	+	Shift + Display / Media
	File Type		Text / Goto
	Repeat		Green / APP / Repeat
	VFP/Scan Mode		AV / Input / RDS
	3D Phonic/HP		TV/Radio /
	C.Voice	+	Shift + Setup / OPT / Tools
	DVD Audio In	+	Shift + Sound / Title
	My Sound		Picture / Format
	Sound Mode		Sound / Title
	Subwoofer Level+		CH+ / Page+
	V.Bass	+	Shift + Audio / Lang I/II
	Subwoofer Level-		CH- / Page-
	Repeat A-B		Yellow / YouTube / Repeat
	Cancel		Exit / Cancel / Clear
	Set Up		Setup / OPT /
	Return	+	Shift + Back / Return

Originalfernbedienung Ersatzfernbedienung

	Angle		Info / Angle
	Tv Vol+	+	Shift + Right
	Tv Vol-	+	Shift + Left
	Enter/Set		OK
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Sleep		Sleep / Timer
	A.STBY	+	Shift + 0
	Clock/Timer	+	Shift + Sleep / Timer
	MIC Vol+	+	Shift + Up
	MIC Vol-	+	Shift + Down
	Karaoke Setting		Smart / List
	Mic Mix	+	Shift + Smart / List
	TV Channel+	+	Shift + CH+ /
	Vocal Masking		Eject / Surround



