

 

 



 



 





 











**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Eject		Eject / Surround
	Clear		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Right		Right
	OK/CLK/CNT		OK
	Down		Down
	[ i ]		Info / Angle
	<<		<< / Tune-
	Pause/Still		Pause / Step / Freeze
	Play		Play / Slow
	>>		>> / Tune+
	Rec/QSR		Rec / Rec Mode
	Stop		Stop / Hold
	1		1
	2		2

**Originalfernbedienung Ersatzfernbedienung**

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV/VCR		TV/Radio /
	0		0
	CM Skip		Setup / OPT /
	AV		AV / Input / RDS
	C.Lock		Smart / List
	VISS		Guide / EPG / -/-

