









 



 
 



 

 



 

 







**Originalfernbedienung    Ersatzfernbedienung**

|   |           |   |                  |
|---|-----------|---|------------------|
|    | Power     |    | Power            |
|    | TV        |    | TV/Radio /       |
|    | Caption   |    | Display / Media  |
|    | AV Mode   |    | Smart / List     |
|    | [ ]/Ratio |    | Subtitle / EQ    |
|    | Input     |    | AV / Input / RDS |
|    | 1         |    | 1                |
|    | 2         |    | 2                |
|    | 3         |    | 3                |
|    | 4         |    | 4                |
|   | 5         |   | 5                |
|  | 6         |  | 6                |
|  | 7         |  | 7                |
|  | 8         |  | 8                |
|  | 9         |  | 9                |
|  | --/List   |  | Guide / EPG / -- |
|  | 0         |  | 0                |

**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |                   |
|---|----------|---|-------------------|
|    | Flahsbk  |    | Zoom / Size       |
|    | Vol+     |    | Vol+              |
|    | FAV      |    | Fav / Marker / PC |
|    | CH/Page+ |    | CH+ / Page+       |
|    | Vol-     |    | Vol-              |
|    | Audio    |    | Audio / Lang I/II |
|    | CH/Page- |    | CH- / Page-       |
|    | Mute     |    | Mute / Dimmer     |
|    | Picture  |    | Picture / Format  |
|    | Info     |    | Info / Angle      |
|   | Sound    |   | Sound / Title     |
|  | Settings |  | Setup / OPT /     |
|  | Up       |  | Up                |
|  | Q.Menu   |  | D.Menu / Top      |
|  | Left     |  | Left              |
|  | OK       |  | OK                |
|  | Right    |  | Right             |





Originalfernbedienung    Ersatzfernbedienung

|  |       |  |                             |
|--|-------|--|-----------------------------|
|  | Back  |  | Back / Return               |
|  | Down  |  | Down                        |
|  | Exit  |  | Exit / Cancel / Clear       |
|  | Sleep |  | Sleep / Timer               |
|  | Stop  |  | Stop / Hold                 |
|  | <<    |  | << / Tune-                  |
|  | Play  |  | Play / Slow                 |
|  | Pause |  | Pause / Step / Freeze       |
|  | >>    |  | >> / Tune+                  |
|  | .     |  | Red / Netflix / Search      |
|  | ..    |  | Green / APP / Repeat        |
|  | ::    |  | Yellow / YouTube / Repeat   |
|  | ::    |  | Blue / Prime Video / Random |
|  |       |  |                             |
|  |       |  |                             |
|  |       |  |                             |
|  |       |  |                             |

Originalfernbedienung    Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

