




























Originalfernbedienung Ersatzfernbedienung

	Score		Smart / List
	Display		Display / Media
	Sleep		Sleep / Timer
	Power		Power
	Play Mode		Blue / Prime Video / Random
	Repeat/FM		Green / APP / Repeat
	Party Light		Red / Netflix / Search
	Light Mode		Yellow / YouTube / Repeat
	Rec To USB		Rec / Rec Mode
	Up		Up
	Tuner Menu		Menu / Home
	Left/Folder-		Left
	OK		OK
	Right/Folder+		Right
	Back		Back / Return
	Down		Down
	Options		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	Function		D.Menu / Top
	Mega Bass		Sound / Title
	Sound Field		Audio / Lang I/II
	<</Tuning-		<< / Tune-
	Play		Play / Slow
	>>/Tuning+		>> / Tune+
	I<</Preset-		I<< / Preset-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>I/Preset+		>>I / Preset+
	Vocal Fader		Mute / Dimmer
	Vol+		Vol+
	Key Control #		CH+ / Page+
	Mic Echo		TV/Radio /
	Vol-		Vol-
	Key Control b		CH- / Page-

