









 
 
















 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	Function		D.Menu / Top
	TFT Mode		Display / Media
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page-
	7		7
	8		8
	9		9
	--/10+		Guide / EPG / --
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	PBC/Menu		Menu / Home
	Clear		Exit / Cancel / Clear
	0		0
	Setup		Setup / OPT /
	Up		Up
	Search		Red / Netflix / Search
	Vol+		Vol+
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Down		Down
	Stop		Stop / Hold
	Audio		Audio / Lang I/II
	I<<		I<< / Preset-



