


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Auto		Smart / List
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Display		Display / Media
	Nicam		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung Ersatzfernbedienung**

	+/-		Shift + Guide / EPG / +/-
	Recall		Back / Return
	LCD Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Input		AV / Input / RDS
	Sleep		Sleep / Timer
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Text		Text / Goto
	Hold		Stop / Hold





Originalfernbedienung Ersatzfernbedienung

	Index		D.Menu / Top
	Size		Zoom / Size
	EPG		Guide / EPG / -/--
	Subtitle		Subtitle / EQ
	Subpage		Shift + Subtitle / EQ
	Reveal		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	FAV		Fav / Marker / PC
	FAV-		<< / Tune-
	FAV+		>> / Tune+
	Lang		Audio / Lang I/II
	Aspect		Shift + Picture / Format

Originalfernbedienung Ersatzfernbedienung


