 

 

 


 

 

 




 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red/Sub.		Red / Netflix / Search
	Green/TTX		Green / APP / Repeat
	Yellow/Audio		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	EPG		Guide / EPG / -/--
	Info		Info / Angle
	Tv/Radio		TV/Radio /
	Rec		Rec / Rec Mode
	DTV		Smart / List
	Video		Shift + 4
	Music		Audio / Lang I/II
	Picture		Picture / Format
	APP		Shift + Green / APP /
	Setting		Setup / OPT /
	Web		Display / Media

Originalfernbedienung Ersatzfernbedienung

	Goto		Text / Goto
	Home		Shift + Menu /
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Del		Exit / Cancel / Clear
	>>I		>>I / Preset+
	Vol+		Vol+
	>>		>> / Tune+
	I<<		I<< / Preset-
	Vol-		Vol-
	<<		<< / Tune-
	1		1





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

2 ABC	2	DVD 2	2		
3 DEF	3	CD - STB 3	3		
4 GHI	4	VIDEO 4	4		
5 JKL	5	TAPE 5	5		
6 MNO	6	TUNER 6	6		
7 PQRS	7	AUX - HDD 7	7		
8 TUV	8	USB 8	8		
9 WXYZ	9	BLUETOOTH 9	9		
▶ 	Play	SLOW ▶	Play / Slow		
 	Pause	STEP - FREEZE 	Pause / Step / Freeze		
0 []	0	HDMI - BAT 0	0		
■	Stop	HOLD ■	Stop / Hold		

