


















 





















Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Page+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Page-		CH- / Page-
	Down		Down
	Power		Power
	1		1
	2		2
	3		3
	Menu		Menu / Home
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	[]		Subtitle / EQ
	7		7
	8		8
	9		9
	Input		AV / Input / RDS
	Sleep		Sleep / Timer
	0		0
	Mute		Mute / Dimmer
	Text		Text / Goto
	Woofers		Setup / OPT /
	(())		Sound / Title
	Audio		Audio / Lang I/II
	Index		Info / Angle
	Normal		Smart / List
	Recall		Back / Return
	System		D.Menu / Top
	Time		Shift + Sleep / Timer





Originalfernbedienung Ersatzfernbedienung

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

