

 





 



 


 






















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	USB		Shift + 8
	Tv/DVD		TV/Radio /
	Open/Close		Eject / Surround
	Tools		Shift + Setup / OPT / Tools
	Select		OK
	Clear		Exit / Cancel / Clear
	Repeat		Green / APP / Repeat
	Disc Menu		D.Menu / Top
	Setup		Setup / OPT /
	Up		Up
	Left		Left
	OK		Shift + OK
	Right		Right
	Down		Down
	Back		Back / Return

Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	I<		I<< / Preset-
	>I		>>I / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Tv Vol+		Vol+
	Tv Mute		Mute / Dimmer
	P+		CH+ / Page+
	Tv Vol-		Vol-
	P-		CH- / Page-
	1		1
	0		0
	3		3





Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	2		2
	Audio		Audio / Lang I/II
	Rec Mode		Shift + Rec / Rec Mode
	Timer		Sleep / Timer
	Edit		Zoom / Size
	Showview		Smart / List

Originalfernbedienung Ersatzfernbedienung

