



**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	On		AV / Input / RDS
	Keystone		Audio / Lang I/II
	Up		Up
	Menu/Help		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Back		Fav / Marker / PC
	Forward		>> / Tune+
	Break Timer		Sleep / Timer
	Freeze		Pause / Step / Freeze
	Vol+		Vol+
	Picture Mode		Picture / Format
	AV Mute		Mute / Dimmer

**Originalfernbedienung Ersatzfernbedienung**

	Vol-		Vol-
	Input 1		1
	Input 2		2
	Auto Sync		Guide / EPG / -/-
	Input 3		3
	Input 4		4
	Resize		Zoom / Size

