 


 
 





 
 



 
 


 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	O)/I-II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

 

 



 

 

 




Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List/Repeat		Smart / List
	Vol-		Vol-
	♥/Title		Fav / Marker / PC
	Sleep/Menu		Sleep / Timer
	EPG/Setup		Guide / EPG / -/-
	Recall		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	>>		>> / Tune+
	Yellow		Yellow / YouTube / Repeat
	I<<		I<< / Preset-
	Blue		Blue / Prime Video / Random
	>>		>> / Preset+
	[=]		Text / Goto
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	[=+]		Picture / Format
	Stop/Still		Stop / Hold
	Radio/Open/Close		TV/Radio /
	[=◆]/[++]		Zoom / Size
	[=x]		Setup / OPT /
	[=o]/Subtitle		Subtitle / EQ
	DMP		D.Menu / Top
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

