









 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[=]		Text / Goto
	Enter		OK
	Vol+		Vol+
	Prog+		CH+ / Page+
	Vol-		Vol-
	Prog-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--



 





 













 

 

 







Originalfernbedienung Ersatzfernbedienung

	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Repeat		Shift + Green / APP /




 
 

 











 

 


 
 

 











Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Display		Display / Media
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Wide Mode		Zoom / Size
	Tv/Video		TV/Radio /
	-/-/Search Mode		Guide / EPG / -/-
	0		0
	Clear		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Time		Sleep / Timer
	Red/Shuffle		Red / Netflix / Search
	Green/Program		Green / APP / Repeat
	Repeat		Shift + Green / APP /
	A-B		Shift + Yellow / YouTube /
	Yellow/Audio		Yellow / YouTube / Repeat
	Blue/Angle		Blue / Prime Video / Random
	[=]/Subtitle		Text / Goto
	Subtitle On/Off		Subtitle / EQ
	AV Center		AV / Input / RDS
	< I Step		Shift + Left
	Step >		Shift + Right
	< I Slow		CH- / Page-
	Slow >		CH+ / Page+
	AV Vol+		Vol+
	I<</Prev		I<< / Preset-
	>>I/Next		>>I / Preset+



