 

 

 
 

 





Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Mute		Mute / Dimmer
	Freeze		Pause / Step / Freeze
	R-Click/Menu		D.Menu / Top
	Auto Keystone		Setup / OPT /
	Input		AV / Input / RDS
	Auto Set		Menu / Home
	Up/Zoom+		Up
	Left		Left
	Enter		OK
	Right		Right
	Cancel		Exit / Cancel / Clear
	Down/Zoom-		Down
	Vol+		Vol+
	↑ (PJ Mode)		CH+ / Page+
	Vol-		Vol-
	↓ (PJ Mode)		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	↑		Shift + Up
	↓		Shift + Down
	Resize Up		Shift + CH+ /
	Resize Down		Shift + CH- /

