
 

 










 





















**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Info		Info / Angle
	Input		AV / Input / RDS
	[++]		Setup / OPT /
	[/1]		Picture / Format
	[/2]		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	CH.List		Smart / List
	[=]		D.Menu / Top
	Up		Up
	Colors		Fav / Marker / PC
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Vol+		Vol+
	Home		Menu / Home
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	TXT		Text / Goto
	Voice		Audio / Lang I/II
	Sub.		Subtitle / EQ
	Netflix		Red / Netflix / Search
	YouTube		Yellow / YouTube / Repeat
	Prime Video		Blue / Prime Video / Random
	Rakuten Tv		TV/Radio /

Originalfernbedienung Ersatzfernbedienung