










 





 



Originalfernbedienung Ersatzfernbedienung

	Auto Setup		Setup / OPT /
	Multi-Live		Display / Media
	Default		Guide / EPG / -/--
	Digital Zoom-		I<< / Preset-
	Index Window		Info / Angle
	Computer		1
	Network		Red / Netflix / Search
	Function		D.Menu / Top
	AV Mute		Mute / Dimmer
	Digital Zoom+		>>I / Preset+
	Right		Right
	Volume-		Vol-
	Volume+		Vol+
	Freeze		Pause / Step / Freeze
	Power		Power
	Left		Left
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Return		Back / Return
	Menu		Menu / Home
	Page Down		CH- / Page-
	Page Up		CH+ / Page+
	Video		4
	Enter		OK
	Computer		Fav / Marker / PC

