

 

 









 

 

 
 


 

 



 

 



 
 









Originalfernbedienung Ersatzfernbedienung

	Main Power		Power
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	Tv Input		TV/Radio /
	Setup		Setup / OPT /
	Menu		Menu / Home
	SPKR1/2		Audio / Lang I/II
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Volume+		Vol+
	S-Direct		Smart / List
	Bass+		CH+ / Page+
	Volume-		Vol-









 
 


 

 

 

Originalfernbedienung Ersatzfernbedienung

	P.Scan		Display / Media
	Bass-		CH- / Page-
	Phono		1
	DVD		2
	CD		3
	Tuner		6
	Rec. 2		8
	Rec. 1		5
	AUX		7
	DSS		9
	Dimmer		Shift + Mute / Dimmer
	Treble+		Shift + CH+ /
	Treble-		Shift + CH- /
	VCR		4





Originalfernbedienung Ersatzfernbedienung

	Power Source		Power
	Sleep		Sleep / Timer
	Dimmer		Shift + Mute / Dimmer
	S-Direct		Smart / List
	Mute		Mute / Dimmer
	Volume+		Vol+
	Volume-		Vol-
	Tv Input		TV/Radio /
	SPKR 1/2		Audio / Lang I/II
	Bass+		CH+ / Page+
	Treble+		Shift + CH+ /
	T-Mode		Picture / Format
	P.Scan		Display / Media
	Bass-		CH- / Page-
	Treble-		Shift + CH- /
	I<< Channel/Skip		I<< / Preset-
	Channel/Skip >>I		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	Pause/T.Disp		Pause / Step / Freeze
	Play/PTY		Play / Slow
	<<		<< / Tune-
	Tune/Search		>> / Tune+
	Stop/Band		Stop / Hold
	Left		Left
	Up		Up
	Right		Right
	Down		Down
	Enter		OK
	Setup		Setup / OPT /
	Info		Info / Angle
	Menu		Menu / Home
	1		1
	2		2
	3		3
	4		4



