

 









 

 

 

 

 










 





 





 



 

















 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Energy Saving		Text / Goto
	AV Mode		Picture / Format
	Input		AV / Input / RDS
	Tv/Rad		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	FAV/Mark		Fav / Marker / PC
	CH+		CH+ / Page+
	Vol-		Vol-
	Ratio		Eject / Surround
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Guide		Guide / EPG / -/-
	Home		Menu / Home
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Info		Info / Angle



