

 

 





 

 

 





 





 





 







 

 

 



 

 



 

 

 







 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|------------------|
|  | Power |  | Power |
|  | Energy Saving |  | Text / Goto |
|  | AV Mode |  | Picture / Format |
|  | Input |  | AV / Input / RDS |
|  | Tv/Rad |  | TV/Radio / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | List |  | Smart / List |
|  | 0 |  | 0 |
|  | Q.View |  | Setup / OPT / |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------------------|
|  | Vol+ |  | Vol+ |
|  | FAV/Mark |  | Fav / Marker / PC |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Ratio |  | Eject / Surround |
|  | CH- |  | CH- / Page- |
|  | Mute |  | Mute / Dimmer |
|  | Guide |  | Guide / EPG / -/- |
|  | Home |  | Menu / Home |
|  | Q.Menu |  | D.Menu / Top |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Back |  | Back / Return |
|  | Info |  | Info / Angle |



