




 



 




























Originalfernbedienung Ersatzfernbedienung



 








 

	On/Off		Power
	TV/VTR		TV/Radio /
	Up		Shift + Up
	Execute		Shift + OK
	Menu		Menu / Home
	Left		Shift + Left
	Right		Shift + Right
	Down		Shift + Down
	Counter Reset		Exit / Cancel / Clear
	Quick Timer		Sleep / Timer
	Audio Monitor		Audio / Lang I/II
	Audio Dub		Sound / Title
	1		1
	2		2
	3		3
	Auto/Manu		Smart / List
	Tracking Normal/Slow ▼		Down

Originalfernbedienung Ersatzfernbedienung

	Tracking Normal/Slow ▲		Up
	Index Mark		Info / Angle
	Index Erase		Back / Return
	4		4
	5		5
	6		6
	Still Adjust I> Slow-		Shift + CH- /
	Still Adjust I> Slow+		Shift + CH+ /
	Tape Speed SP/LP		Setup / OPT /
	Input Select		AV / Input / RDS
	7		7
	8		8
	9		9
	Vol+		Vol+
	Prog+		CH+ / Page+
	<II Frame		Left
	Frame II >		Right




Originalfernbedienung Ersatzfernbedienung






 



 

























	Rec		Rec / Rec Mode
	-/--		Guide / EPG / -/--
	0		0
	Vol-		Vol-
	Prog-		CH- / Page-
	Hi-Speed REW		Shift + I<< / Preset-
	<< Search		Shift + << /
	Search >>		Shift + >> /
	I<< Index Search		I<< / Preset-
	Index Search >>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	<< REW		<< / Tune-
	Play		Play / Slow
	>> FF		>> / Tune+
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	On/Off		Power
	TV/VTR		TV/Radio /
	Up		Shift + Up
	Execute		Shift + OK
	Menu		Menu / Home
	Left		Shift + Left
	Right		Shift + Right
	Down		Shift + Down
	Counter Reset		Exit / Cancel / Clear
	Quick Timer		Sleep / Timer
	Audio Monitor		Audio / Lang I/II
	Audio Dub		Sound / Title
	1		1
	2		2
	3		3
	Auto/Manu		Smart / List
	Tracking Normal/Slow ▼		Down

Originalfernbedienung Ersatzfernbedienung

	Tracking Normal/Slow ▲		Up
	Index Mark		Info / Angle
	Index Erase		Back / Return
	4		4
	5		5
	6		6
	Still Adjust I> Slow-		Shift + CH- /
	Still Adjust I> Slow+		Shift + CH+ /
	Tape Speed SP/LP		Setup / OPT /
	Input Select		AV / Input / RDS
	7		7
	8		8
	9		9
	Vol+		Vol+
	Prog+		CH+ / Page+
	<II Frame		Left
	Frame II>		Right





Originalfernbedienung Ersatzfernbedienung






 



 
























	Rec		Rec / Rec Mode
	-/--		Guide / EPG / -/--
	0		0
	Vol-		Vol-
	Prog-		CH- / Page-
	Hi-Speed REW		Shift + I<< / Preset-
	<< Search		Shift + << /
	Search >>		Shift + >> /
	I<< Index Search		I<< / Preset-
	Index Search >>I		>>I / Preset+
	Pause		Pause / Step / Freeze
<< REW button"/>	<< REW		<< / Tune-
	Play		Play / Slow
>> FF button"/>	>> FF		>> / Tune+
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	On/Off		Power
	TV/VTR		TV/Radio /
	Up		Shift + Up
	Execute		Shift + OK
	Menu		Menu / Home
	Left		Shift + Left
	Right		Shift + Right
	Down		Shift + Down
	Counter Reset		Exit / Cancel / Clear
	Quick Timer		Sleep / Timer
	Audio Monitor		Audio / Lang I/II
	Audio Dub		Sound / Title
	1		1
	2		2
	3		3
	Auto/Manu		Smart / List
	Tracking Normal/Slow ▼		Down

Originalfernbedienung Ersatzfernbedienung

	Tracking Normal/Slow ▲		Up
	Index Mark		Info / Angle
	Index Erase		Back / Return
	4		4
	5		5
	6		6
	Still Adjust I> Slow-		Shift + CH- /
	Still Adjust I> Slow+		Shift + CH+ /
	Tape Speed SP/LP		Setup / OPT /
	Input Select		AV / Input / RDS
	7		7
	8		8
	9		9
	Vol+		Vol+
	Prog+		CH+ / Page+
	<II Frame		Left
	Frame II>		Right




Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	-/--		Guide / EPG / -/--
	0		0
	Vol-		Vol-
	Prog-		CH- / Page-
	Hi-Speed REW		Shift + I<< / Preset-
	<< Search		Shift + << /
	Search >>		Shift + >> /
	I<< Index Search		I<< / Preset-
	Index Search >>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	<< REW		<< / Tune-
	Play		Play / Slow
	>> FF		>> / Tune+
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung







Originalfernbedienung Ersatzfernbedienung

	On/Off		Power
	TV/VTR		TV/Radio /
	Audio Monitor		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Vol+		Vol+
	Prog+		CH+ / Page+
	-/--		Guide / EPG / -/--
	0		0
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Prog-		CH- / Page-

