















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	USB	 + 	Shift + 8
	TTX		Text / Goto
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Fav		Fav / Marker / PC
	I<<		I<< / Preset-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Red / TV/Radio		Red / Netflix / Search
	Red / TV/Radio		TV/Radio /
	Green / Media		Green / APP / Repeat
	Green / Media		Display / Media
	Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Blue / Timer		Blue / Prime Video / Random
	Blue / Timer		Sleep / Timer
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	EPG		Guide / EPG / -/--
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Info		Info / Angle
	CH-		CH- / Page-





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
1..@	1	TV	1				
2 abc	2	DVD	2				
3 def	3	CD - STB	3				
4 ghi	4	VIDEO	4				
5 jkl	5	TAPE	5				
6 mno	6	TUNER	6				
7 pqrs	7	AUX - HDD	7				
8 tuv	8	USB	8				
9 wxyz	9	BLUETOOTH	9				
AUDIO	Audio	LANG I/II	Audio / Lang I/II				
0	0	HDMI - BAT	0				
SUBTITLE	Subtitle	EQ	Subtitle / EQ				

