



Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PRE-CH		Fav / Marker / PC
	0		0
	List		Smart / List
	Vol+		Vol+
	[i]		Info / Angle
	P+		CH+ / Page+




 




 

 


 
Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	*		D.Menu / Top
	P-		CH- / Page-
	Home		Menu / Home
	Up		Up
	=		Setup / OPT /
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Input		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	Guide		Guide / EPG / -/-
	Text		Text / Goto
	Lang		Audio / Lang I/II
	Subt.		Subtitle / EQ





Originalfernbedienung Ersatzfernbedienung

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Zoom		Zoom / Size
	Play		Play / Slow
	Stop		Stop / Hold
	Netflix		Shift + Red / Netflix /

Originalfernbedienung Ersatzfernbedienung