 

 



 

 

 









 

 





 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	OTPB		Smart / List
	Showview		D.Menu / Top
	Tv/VCR		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Channel+		CH+ / Page+
	OK		Mute / Dimmer
	Enter		OK


 
 
 

Originalfernbedienung Ersatzfernbedienung

	Clear		Exit / Cancel / Clear
	0		0
	Channel-		CH- / Page-
	<< Search		I<< / Preset-
	Search >>		>>I / Preset+
	Pause/Still		Pause / Step / Freeze
	Play		Play / Slow
	Rec/OTR		Rec / Rec Mode
	<</REW		<< / Tune-
	>>/F.FWD		>> / Tune+
	Stop		Stop / Hold
	Menu		Menu / Home
	Up		Up
	D/WLY		Red / Netflix / Search
	ADD T		Green / APP / Repeat
	Left		Left
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	A-TR		Text / Goto
	Down		Down
	Reset		Back / Return
	Display		Display / Media
	CH NO. Set		AV / Input / RDS
	Auto Set		Zoom / Size

Originalfernbedienung Ersatzfernbedienung

