

 

 














































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Source		AV / Input / RDS
	Home		Shift + Menu /
	Up		Up
	Menu		Menu / Home







 













Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	prime video		Shift + Blue / Prime
	Internet		Display / Media
	YouTube		Shift + Yellow / YouTube /
	Vol+		Vol+
	Text		Text / Goto
	P+		CH+ / Page+
	Vol-		Vol-
	[:::]		Setup / OPT /
	P-		CH- / Page-
	Guide		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

	<</Reveal		<< / Tune-
	Play/Index		Play / Slow
	>>/Hold		>> / Tune+
	Subtitle		Subtitle / EQ
	Pause		Pause / Step / Freeze
	AD		Audio / Lang I/II
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

