



**Originalfernbedienung    Ersatzfernbedienung**

SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
DIMMER	Dimmer	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer
DISPLAY	Display	MEDIA DISPLAY	Display / Media
RECEIVER I/O	Power	POWER	Power
TUNER BAND	Band/Tuner	PROGRAM TV/RADIO	TV/Radio /
SHIFT	Shift	LIST SMART	Smart / List
FM MODE	FM Mode	TUNER 6	6
+	Function+	+ CH PAGE	CH+ / Page+
PRESET -	Preset-	PRESET- I<<	I<< / Preset-
PRESET +	Preset+	PRESET+ >>I	>>I / Preset+
FUNCTION -	Function-	CH PAGE -	CH- / Page-
CD PLAY	Play CD	SLOW	Play / Slow
CD PAUSE	Pause CD	STEP-FREEZE II	Pause / Step / Freeze
CD STOP	Stop CD	HOLD	Stop / Hold
CD I<<	I<< CD	TUNE- <<	<< / Tune-
CD >>I	>>I CD	TUNE+ >>	>> / Tune+
VOL +	Vol+	+ VOL	Vol+

**Originalfernbedienung    Ersatzfernbedienung**

MD PLAY	Play MD	SHIFT + SLOW	Shift + Play /
MD PAUSE	Pause MD	SHIFT + STEP-FREEZE II	Shift + Pause / Step /
MD STOP	Stop MD	SHIFT + HOLD	Shift + Stop /
VOL -	Vol-	VOL -	Vol-
I<< MD	I<< MD	SHIFT + TUNE- <<	Shift + << /
>>I MD	>>I MD	SHIFT + TUNE+ >>	Shift + >> /
MUTING	Muting	DIMMER MUTE	Mute / Dimmer
BASS +	Bass+	▲	Up
MID +	MID+	▶	Right
TREBLE +	Treble+	▶ REPEAT A-B	Yellow / YouTube / Repeat
BASS -	Bass-	▼	Down
MID -	Mid-	◀	Left
TREBLE -	Treble-	APP REPEAT	Green / APP / Repeat
EQ BANK	EQ Bank	EQ SUBTITLE	Subtitle / EQ

