




 



 



 




 
















**Originalfernbedienung    Ersatzfernbedienung**

 Power / Standby	 Power
 TV / Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 Hold	 Shift + Stop /
 TVG	 Guide / EPG / -/--
 Audio	 Audio / Lang I/II
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 << / Size	 << / Tune-
 << / Size	 Zoom / Size
 >> / Subpage	 >> / Tune+
 Rec	 Rec / Rec Mode

**Originalfernbedienung    Ersatzfernbedienung**

 Stop	 Stop / Hold
 I<< / FAV	 I<< / Preset-
 I<< / FAV	 Fav / Marker / PC
 >>I / Index	 >>I / Preset+
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Aspect	 Picture / Format
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-




**Originalfernbedienung Ersatzfernbedienung**

Originalfernbedienung	Ersatzfernbedienung
DISP	Display / Media
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Shift + Guide / EPG / -/--
0	0
↶	Back / Return

**Originalfernbedienung Ersatzfernbedienung**