





 





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Eject		Eject / Surround
	Index		Info / Angle
	Rec Speed		Setup / OPT /
	CLK/Count		D.Menu / Top
	Picture		Picture / Format
	Timer		Sleep / Timer
	1		1
	2		2
	3		3
	Strobe		Blue / Prime Video / Random
	Audio		Audio / Lang I/II
	4		4
	5		5
	6		6
	Art		Text / Goto
	Input		AV / Input / RDS

 





Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	+		Vol+
	CH+		CH+ / Page+
	100		Guide / EPG / -/-
	0		0
	CLR/RST		Exit / Cancel / Clear
	-		Vol-
	CH-		CH- / Page-
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause/Still		Pause / Step / Freeze
	Display		Display / Media





Originalfernbedienung   Ersatzfernbedienung   Originalfernbedienung   Ersatzfernbedienung

	Monitor	 REPEAT A-B	Yellow / YouTube / Repeat		
	A.Dub	 TITLE SOUND	Sound / Title		
	Input System	 NETFLIX SEARCH	Red / Netflix / Search		
	Up		Up		
	Output System	 APP REPEAT	Green / APP / Repeat		
	Left		Left		
	OK		OK		
	Right		Right		
	Auto	 LIST SMART	Smart / List		
	Down		Down		
	Menu	 HOME MENU	Menu / Home		
	← Tracking	 PRESET- I<< / Preset-	I<< / Preset-		
	Trackink →	 PRESET+ >>I / Preset+	>>I / Preset+		
	Slow-	 SHIFT + 	Shift + Down		
	Slow+	 SHIFT + 	Shift + Up		

