



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Phono		Smart / List
	Volume-		Vol-
	Volume+		Vol+
	Pause CD		Pause / Step / Freeze
	Stop CD		Stop / Hold
	Disc CD		Blue / Prime Video / Random
	Play CD		Play / Slow
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+
	< Deck II		Shift + Left
	Deck II >		Shift + Right
	Pause Deck II		Shift + Pause / Step /
	Stop Deck II		Shift + Stop /
	<< Deck II		Shift + << /
	>> Deck II		Shift + >> /
	Rec Deck II		Shift + Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

	Stop Deck I		OK
	< Deck I		Left
	Deck I >		Right
	Tuner-		<< / Tune-
	Tuner+		>> / Tune+

