





 











 

 

 

 





 


 



Originalfernbedienung Ersatzfernbedienung






















	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Still		Shift + Pause / Step /
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

 

 

	Menu		Menu / Home
	Source		AV / Input / RDS
	UP		Up
	Left		Left
	OK / Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Info		Info / Angle
	Media		Display / Media
	CH+		CH+ / Page+
	Auto / PVR List		Smart / List
	Vol+		Vol+
	CH-		CH- / Page-
	Sleep		Sleep / Timer
	Vol-		Vol-
	Red		Red / Netflix / Search




Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<< / Text		Text / Goto
	<< / Text		<< / Tune-
	>> / Hold		Shift + Stop /
	>> / Hold		>> / Tune+
	l<< / Mix		l<< / Preset-
	>>l / Reveal		>>l / Preset+
	Play/Pause / Index		Play / Slow
	Play/Pause / Index		Pause / Step / Freeze
	Stop / Size		Zoom / Size
	Stop / Size		Stop / Hold
	Fav		Fav / Marker / PC
	Scale		Setup / OPT /
	EPG		Guide / EPG / -/--
	DTV / Radio		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Subtitle		Subtitle / EQ

