
























Originalfernbedienung Ersatzfernbedienung

PWR On/Off		Power
Mute		Mute / Dimmer
Subt.List		Subtitle / EQ
Zoom		Zoom / Size
TV		TV/Radio /
Text		Text / Goto
TV/SAT		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Volume+		Vol+
Epg		Smart / List

Originalfernbedienung Ersatzfernbedienung

CH/Page+		CH+ / Page+
Volume-		Vol-
Display		Display / Media
CH/Page-		CH- / Page-
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/-
0/10		0
FAV Pref.		Fav / Marker / PC
Red		Red / Netflix / Search



