





























 







Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	Dimmer		Shift + Mute / Dimmer
	4		4
	5		5
	6		6
	Memory		Rec / Rec Mode
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0
	>10		Guide / EPG / -/-
	Clock/Timer		Shift + Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	P.Bass		Setup / OPT /
	Bass/Treble		D.Menu / Top
	Repeat		Green / APP / Repeat
	Random		Blue / Prime Video / Random
	<</>> Tuning		<< / Tune-
	<</>> Tuning		I<< / Preset-
	Preset Up		Up
	Preset Up		Shift + >>I / Preset+
	Preset Up		CH+ / Page+
	Tuning >>I/>>		>> / Tune+
	Tuning >>I/>>		>>I / Preset+
	Vol-		Vol-
	Vol-		Left
	Enter		OK
	Vol+		Vol+
	Vol+		Right



