



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	CH.List		Smart / List
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	[=]		D.Menu / Top
	Up		Up
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Home		Menu / Home
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

TEXT	Text	GOTO TEXT	Text / Goto
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
INFO	Info	ANGLE INFO	Info / Angle
free	Free	SHIFT + TV 1	Shift + 1
Edit	Edit	SHIFT + APP REPEAT	Shift + Green / APP /
deezer	deezer	SHIFT + CD-STB 3	Shift + 3
Netflix	Netflix	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
prime video	prime video	SHIFT + Prime Video RANDOM	Shift + Blue / Prime
YouTube	YouTube	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
Plex	Plex	SHIFT + VIDEO 4	Shift + 4
BROWSER	Browser	MEDIA DISPLAY	Display / Media
Disney+	Disney+	SHIFT + DVD 2	Shift + 2

Originalfernbedienung Ersatzfernbedienung

