



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Reset		Exit / Cancel / Clear
	Rec Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	<< Deck		Down
	>> Deck		Up
	Stop Deck		OK
	< Deck		Left
	> Deck		Right
	Side A/B		Back / Return
	Tuner		Shift + 6
	Tuner		Smart / List
	Function		Menu / Home
	1		1
	2		2
	3		3
	4		4

 
Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	Preset Down		I<< / Preset-
	Preset Up		>>I / Preset+
	Memo		Rec / Rec Mode
	10		0
	+10		Guide / EPG / -/--
	Tuning Down		<< / Tune-
	Tuning Up		>> / Tune+
	Band		Play / Slow
	Eon		Pause / Step / Freeze
	Vol+		Vol+
	RDS		AV / Input / RDS
	PTY		Stop / Hold





Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Edit		Setup / OPT /
	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+
	Time Side A/B		Display / Media
	<< CD		<< / Tune-
	>> CD		>> / Tune+
	Stop CD		Stop / Hold
	Play CD		Play / Slow
	Program		TV/Radio /
	Cancel		Exit / Cancel / Clear
	Direct		Smart / List
	Tuner		Shift + 6
	Function		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	1 CD		1
	2 CD		2
	3 CD		3
	4 CD		4
	5 CD		5
	6 CD		6
	7 CD		7
	8 CD		8
	9 CD		9
	10 CD		0
	+10 CD		Guide / EPG / -/-
	Vol+		Vol+
	Vol-		Vol-

