




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		1
	Media Player		2
	Blu-ray		Fav / Marker / PC
	Game1		4
	Game2		5
	AUX1		7
	AUX2	 + 	Shift + 7
	TV Audio		Audio / Lang I/II
	Tuner		6
	USB		8
	CD		3
	Bluetooth		9
	Guide / EPG / -/--		Guide / EPG / -/--
	Phono		0
	Internet Radio		TV/Radio /
	CH/Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Eco		Display / Media
	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Info		Info / Angle
	Option	 + 	Shift + Setup / OPT / Tools
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Setup		Setup / OPT /
	I<</Tune-		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze



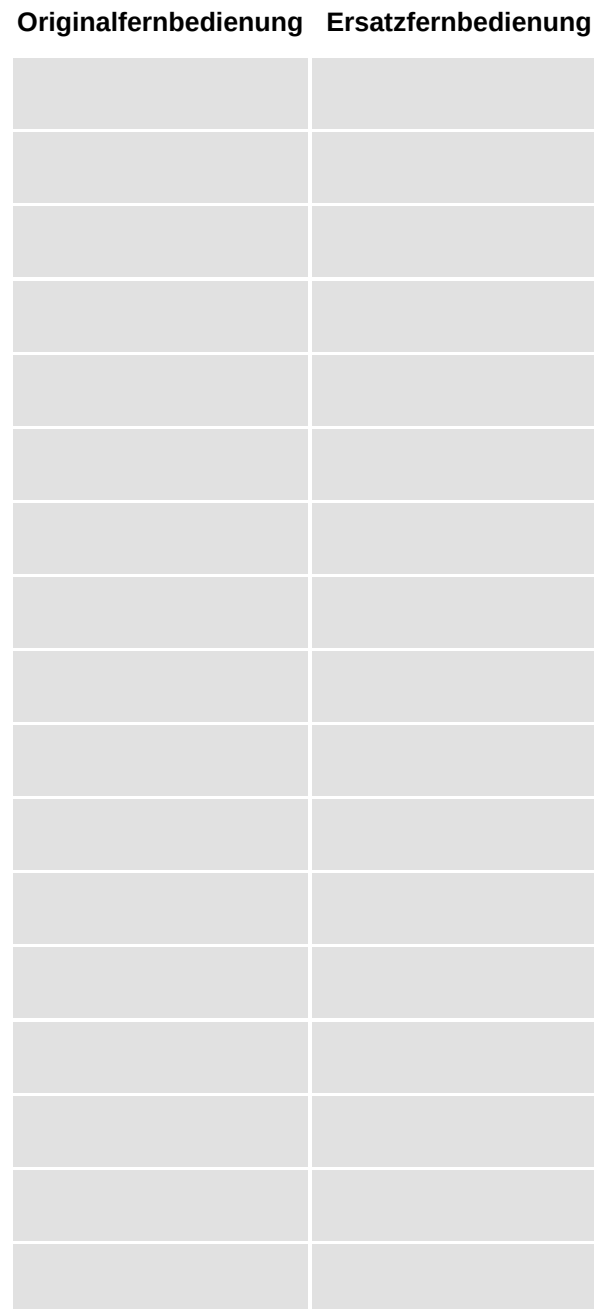



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		1
	Media Player		2
	Blu-ray		Fav / Marker / PC
	Game1		4
	Game2		5
	AUX1		7
	AUX2	 + 	Shift + 7
	TV Audio		Audio / Lang I/II
	Tuner		6
	USB		8
	CD		3
	Bluetooth		9
	Guide / EPG / -/-		Guide / EPG / -/-
	Phono		0
	Internet Radio		TV/Radio /
	CH/Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Back		Back / Return
	I<</Tune-		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>I/Tune+		>>I / Preset+
	Sleep		Sleep / Timer
	Smart Select 1		Red / Netflix / Search
	Smart Select 2		Green / APP / Repeat





Originalfernbedienung	Ersatzfernbedienung
	





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CBL/SAT		1
	Media Player		2
	Blu-ray		Fav / Marker / PC
	Game1		4
	Game2		5
	AUX1		7
	AUX2	 + 	Shift + 7
	TV Audio		Audio / Lang I/II
	Tuner		6
	USB		8
	CD		3
	Bluetooth		9
	Guide / EPG / -/-		Guide / EPG / -/-
	Phono		0
	Internet Radio		TV/Radio /
	CH/Page+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol+
	CH/Page-		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Back		Back / Return
	I<</Tune-		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>I/Tune+		>>I / Preset+
	Sleep		Sleep / Timer
	Smart Select 1		Red / Netflix / Search
	Smart Select 2		Green / APP / Repeat





3 Smart Select 3

4 Smart Select 4



Yellow / YouTube /
Repeat



Blue / Prime Video /
Random

