



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------|--|-------------------------|
| | Display | | Display / Media |
| | Power | | Power |
| | Normal | | Shift + Display / Media |
| | Tv/Av/DVD | | TV/Radio / |
| | Sleep | | Sleep / Timer |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | Aspect | | Smart / List |
| | 0 | | 0 |
| | Sound Mode | | Sound / Title |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------|--|------------------|
| | Vol- | | Vol- |
| | Tv Menu | | Menu / Home |
| | Vol+ | | Vol+ |
| | Up | | Up |
| | PR+ | | CH+ / Page+ |
| | Left | | Left |
| | Right | | Right |
| | Mute | | Mute / Dimmer |
| | PR- | | CH- / Page- |
| | Down | | Down |
| | OK/Enter | | OK |
| | DVD Menu | | D.Menu / Top |
| | o)) | | AV / Input / RDS |
| | I<< | | I<< / Preset- |
| | >>I | | >>I / Preset+ |
| | [...] | | Subtitle / EQ |
| | << | | << / Tune- |



