



Originalfernbedienung	Ersatzfernbedienung
	 Display / Media
	 Power
	 Shift + Display / Media
	 TV/Radio /
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Smart / List
	 0
	 Sound / Title

Originalfernbedienung	Ersatzfernbedienung
	 Vol-
	 Menu / Home
	 Vol+
	 Up
	 CH+ / Page+
	 Left
	 Right
	 Mute / Dimmer
	 CH- / Page-
	 Down
	 OK
	 D.Menu / Top
	 AV / Input / RDS
	 I<< / Preset-
	 >>I / Preset+
	 Subtitle / EQ
	 << / Tune-



[illegible]