



Originalfernbedienung	Ersatzfernbedienung
	 Power
	 Info / Angle
	 Mute / Dimmer
	 AV / Input / RDS
	 1
	 2
	 3
	 CH+ / Page+
	 4
	 5
	 6
	 CH- / Page-
	 7
	 8
	 9
	 Vol+
	 Back / Return

Originalfernbedienung	Ersatzfernbedienung
	 0
	 Guide / EPG / -/--
	 Vol-
	 Text / Goto
	 Sleep / Timer
	 TV/Radio /
	 Picture / Format
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Stop / Hold
	 Smart / List
	 Display / Media



[illegible]