 
 
 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Standby		Shift + Power
	On		Power
	BD		Shift + 1
	SAT/CBL		Shift + 0
	TV		Shift + 3
	USB/Ipod		Shift + 4
	DVD		Shift + 2
	V.AUX		Shift + 7
	Dock		Shift + 5
	Tuner		Shift + 6
	Game		Shift + 9
	Source Select		AV / Input / RDS
	Quick Select 1		Red / Netflix / Search
	Quick Select 2		Green / APP / Repeat
	Quick Select 3		Yellow / YouTube / Repeat
	Quick Select 4		Blue / Prime Video / Random
	CH+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Menu		Menu / Home
	Up		Up
	CH Level/Top		D.Menu / Top
	Left		Left
	Enter		OK
	Right		Right
	Search/Setup		Setup / OPT /
	Down		Down
	Return		Back / Return
	<</Band		<< / Tune-
	Play		Play / Slow
	>>/Mode		>> / Tune+
	I<</Tuning-		I<< / Preset-





Originalfernbedienung	Ersatzfernbedienung
	
	

Pag. 2 / 2