



 
Originalfernbedienung	Ersatzfernbedienung
	 1
	 2
	 3
 Power	 Power
	 4
	 5
	 6
	 Eject / Surround
	 7
	 8
	 9
	 Menu / Home
	 0
	 Guide / EPG / -/--
	 Exit / Cancel / Clear
	 Smart / List
	 Green / APP / Repeat

Originalfernbedienung	Ersatzfernbedienung
	 CH- / Page-
	 CH+ / Page+
	 Stop / Hold
	 Yellow / YouTube / Repeat
	 I<< / Preset-
	 >>I / Preset+
	 Pause / Step / Freeze
	 Red / Netflix / Search
	 << / Tune-
	 >> / Tune+
	 Play / Slow
	 Up
	 Left
	 Right
	 Down
	 Setup / OPT /
	 OK





Originalfernbedienung Ersatzfernbedienung

	NTSC/PAL		D.Menu / Top
	Video/Y		Picture / Format
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	Title		Sound / Title
	Display		Display / Media
	Audio		Audio / Lang I/II
	Language		Shift + Audio / Lang I/II
	3D		Shift + 3
	Zoom		Zoom / Size
	P>P		Back / Return
	Mute		Mute / Dimmer
	Volume-		Vol-
	Volume+		Vol+

Originalfernbedienung Ersatzfernbedienung

