



Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Power		Power
	Mute		Mute / Dimmer
	TV Format		Setup / OPT /
	DVB		Smart / List
	TV / AV		AV / Input / RDS
	Info		Info / Angle
	DVB Info		Shift + Info / Angle
	Language		Shift + Audio / Lang I/II
	Text		Text / Goto
	Fav		Fav / Marker / PC
	EPG		Guide / EPG / -/--
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Audio		Audio / Lang I/II
	Yellow		Yellow / YouTube / Repeat
	Freeze		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	DVB Menu		D.Menu / Top
	DVB Exit		Shift + Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	TV Menu		Menu / Home
	Down		Down
	TV Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Display		Display / Media
	P+		CH+ / Page+
	Vol-		Vol-
	Nicam		Sound / Title
	P-		CH- / Page-
	TV/Txt		Shift + Text / Goto



