




Originalfernbedienung Ersatzfernbedienung

	Open / Close		Eject / Surround
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Goto		Text / Goto
	0		0
	Clear		Exit / Cancel / Clear
	Home Menu		Menu / Home
	Menu		D.Menu / Top
	Bonus View		Display / Media

Originalfernbedienung Ersatzfernbedienung

	Pop / Top		Smart / List
	Rev		<< / Tune-
	Play		Play / Slow
	Fwd		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Strep		Shift + Pause / Step / Freeze
	Slow		Shift + Play /
	Info		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down

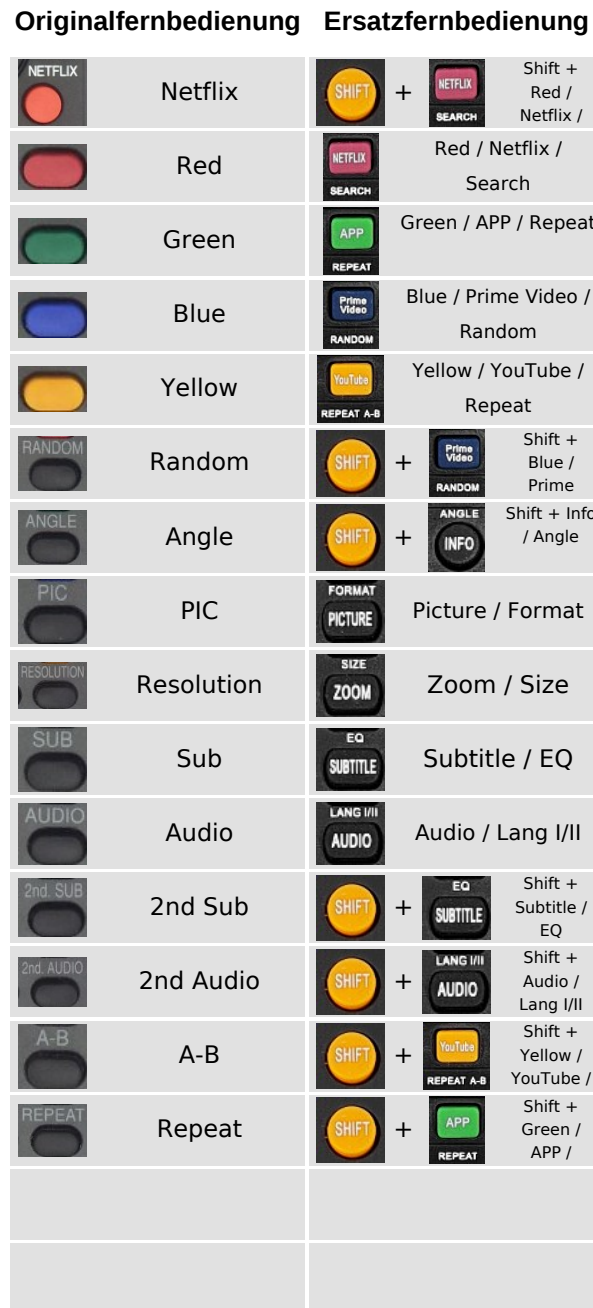

[illegible]