 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	ambilight		TV/Radio /
	prime video		Shift + Blue / Prime
	Windows		Display / Media
	Netflix		Shift + Red / Netflix /
	Rakuten Tv		Shift + Yellow / YouTube /
	Menu		Menu / Home
	Smart Colors		Smart / List
	Pair/Sources		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	←		Back / Return
	Home		Shift + Menu /
	List/Tv Guide		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol-		Vol-
	Vol+		Vol+
	Exit/Tv		Exit / Cancel / Clear
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Mute		Mute / Dimmer
	1		1



[illegible]