

Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute / Dimmer
Play		Play / Slow
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Audio		Audio / Lang I/II
Subt.		Subtitle / EQ
Open/Close		Eject / Surround
Pbc		Picture / Format
Zoom		Zoom / Size
Digest		Sleep / Timer
Progr.		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

Top Menu		D.Menu / Top
Setup		Setup / OPT /
Auto/Track		Text / Goto
C/CH		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Angle		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Clear/00:00		Exit / Cancel / Clear
Menu Down		Down
Return		Back / Return
DVD/TV		Smart / List
Slow Up		CH+ / Page+
Display		Display / Media
Slow Down		CH- / Page-



Originalfernbedienung	Ersatzfernbedienung		Originalfernbedienung	Ersatzfernbedienung	
1		1			
2		2			
3		3			
4		4			
5		5			
6		6			
7		7			
8		8			
9		9			
+10		Guide / EPG / -/--			
0		0			
Mark		Fav / Marker / PC			
Repeat/1/All		Green / APP / Repeat			
Rep/A-B		Yellow / YouTube / Repeat			
Lang	 + 	Shift + Audio / Lang I/II			

