



Originalfernbedienung Ersatzfernbedienung

	Operate		Power
	Timer On/Off		Menu / Home
	1		1
	2		2
	3		3
	Display		Display / Media
	4		4
	5		5
	6		6
	Clear		Exit / Cancel / Clear
	7		7
	8		8
	9		9
	Channel+		CH+ / Page+
	-/--		Guide / EPG / -/--
	0		0
	Input		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Channel-		CH- / Page-
	Time		Sleep / Timer
	VPS/PDC		Smart / List
	Prog		TV/Radio /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause/Still		Pause / Step / Freeze
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Tape Speed		Setup / OPT /
	Zero Back		Back / Return
	Repeat		Green / APP / Repeat
	Skip Search		Red / Netflix / Search
	Slow		Shift + Slow
	< DPSS/-		I<< / Preset-
	> DPSS/+		>>I / Preset+



