



 

 



 
 
 
 

 
 


 



 

 

 





 

 








 



 

 

 



 







 


 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|--------------|
|  | Power |  | Power |
|  | Mute |  | MUTE |
|  | TV |  | TV/R |
|  | Radio |  | Shift + TV/R |
|  | Rec-Menu / Clock |  | OPT+ |
|  | Title |  | VOD |
|  | Audio |  | Audio |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |



 



 










 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|------------|
|  | EPG |  | -/-- / EPG |
|  | Assist |  | MEDIA |
|  | PIP |  | V-FOR |
|  | Text / Disc-M |  | TEXT |
|  | Menu |  | MENU |
|  | End |  | EXIT |
|  | Info |  | INFO |
|  | V+ |  | VOL + |
|  | V- |  | VOL - |
|  | P+ |  | CH + |
|  | P- |  | CH - |
|  | Up |  | UP |
|  | Down |  | DOWN |
|  | Right |  | RIGHT |
|  | Left |  | LEFT |
|  | OK |  | OK |
|  | Red / C-Set |  | Red (A) |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|--------------|
|  | Green / SV |  | Green (B) |
|  | Yellow / Zoom |  | Yellow (C) |
|  | Blue / Marker |  | Blue (D) |
|  | << |  | Rewind |
|  | >> |  | Fast Forward |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | Rec |  | Rec |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

