







 
 
 

 

 

 
 
 

 
 
 

 
 


 
 

 

 
 

 

 
 
 
 
 


 



 









 

 










Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		P.Mode/OK/[=i]		OK
	Mute		MUTE		Up		UP
	1		1		P+		CH +
	2		2		P-		CH -
	3		3		Down		DOWN
	4		4		Right		RIGHT
	5		5		Vol+		VOL +
	6		6		Left		LEFT
	7		7		Vol-		VOL -
	8		8		AV		SRC
	9		9		Menu		MENU
	0		0		Play DVD		Play
	Red		Red (A)		>> DVD		Fast Forward
	Green		Green (B)		<< DVD		Rewind
	Yellow		Yellow (C)		Stop DVD		Stop
	Blue		Blue (D)		Power DVD		Shift + Power
	[=]		TEXT		Down DVD		First



