
 


 
 


 

 






 


 





 





 
 



 
 
 
 

 
 
 





 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
			Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Mute		Mute
	TXT		Text
	Aspect		Format
	Audio		Shift + 3D
	Display		Info
	Sleep		Sleep
	Up / PR +		Up
	Up / PR +		Ch +
	Down / PR -		Down
	Down / PR -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -



