
 





 
 
 


 
 




 








 


 

 




 





 
 
 
 
 
 
 
 
 

 
 
 





 
 

 
 
 
 
 
 



 
 

 


 

 
 
 

 
 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Media	
Reveal		Smart	
Txt Stop		Stop	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio		Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Off		Mute	
Slow Down		I<<	
Subt.		Subt	
Auto/Track		Green	
Slow Up		>>I	
Rep/A-B	 + 	Shift + Text	
Stop		Stop	
Title		List	
Zoom	 + 	Shift + Eject	
Repeat/1/All		Text	
Pause		Pause	
DVD/TV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Return		Back	
Menu Right		Right	
Menu Down		Down	
Volume+		Vol +	
Progr.		Sleep	
Next		Ch +	
Volume-		Vol -	
Top Menu		D. Menu	
Prev.		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		Setup	 Options
9		3D	 3D
+10			
EQ			
0			
C/CH			
Digest			
Record			
Open/Close			
Mode			
Angle			
Rewind			
Play			
Clear/00:00			
Audio			
F.Forward			
NTSC/PAL	