
 
 


 

 




 
 
 
 



 




 
 


 

 











 
 
 





 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Stop	 Stop	Menu Down	 Down
Slow Up	 Ch +	Progr.	 Sleep
Auto/Track	 Smart	Volume+	 Vol +
Pause	 Pause	Next	 >>
Subt.	 Subt	Top Menu	 D. Menu
Rep/A-B	 +  Shift + Text	Volume-	 Vol -
Title	 List	1	 1
Zoom	 +  Shift + Eject	Prev.	 <<
Repeat/1/All	 Text	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Setup	 Options		
8	 8		
Record	 Rec		
F.Forward	 >>		
Angle	 Format		
Play	 Play		
Remain	 Media		
Clear/00:00	 Exit		
Audio	 Dual		
Rewind	 <<		
9	 9		
+10	 Guide		
0	 0		
C/CH	 Pre Ch		
Open/Close	 Eject		

