


Originalfernbedienung Ersatzfernbedienung

	Aper / Chiuso		Eject / Surround
	Video / Y		AV / Input / RDS
	Power		Power
	OSD		Display / Media
	PBC		D.Menu / Top
	Titolo		Sound / Title
	Menu		Menu / Home
	Ricerca		Red / Netflix / Search
	1		1
	2		2
	3		3
	Repeticione		Green / APP / Repeat
	4		4
	5		5
	6		6
	A-B RPT		Yellow / YouTube / Repeat
	7		7



Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Prog		TV/Radio /
	Intro		Smart / List
	0		0
	10+		Guide / EPG / -/-
	Pausa		Pause / Step / Freeze
	Info / Play		Play / Slow
	Info / Play		Info / Angle
	Up		Up
	Left		Left
	Setup		Setup / OPT /
	Right		Right
	Ritorno		Back / Return
	Down		Down
	Stop		Stop / Hold
	<I Ralent		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	Ralent I>		CH+ / Page+
	<< F.REV		<< / Tune-
	>> F.FWD		>> / Tune+
	Step		Shift + Pause / Step /
	Zoom		Zoom / Size
	I<< Prec		I<< / Preset-
	>>I Succ		>>I / Preset+
	Sottotitoli		Subtitle / EQ
	NTSC/PAL		Picture / Format
	Volume-		Vol-
	Volume+		Vol+
			Sleep / Timer
	Track		Text / Goto
	Audio		Audio / Lang I/II
	Muto		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

